


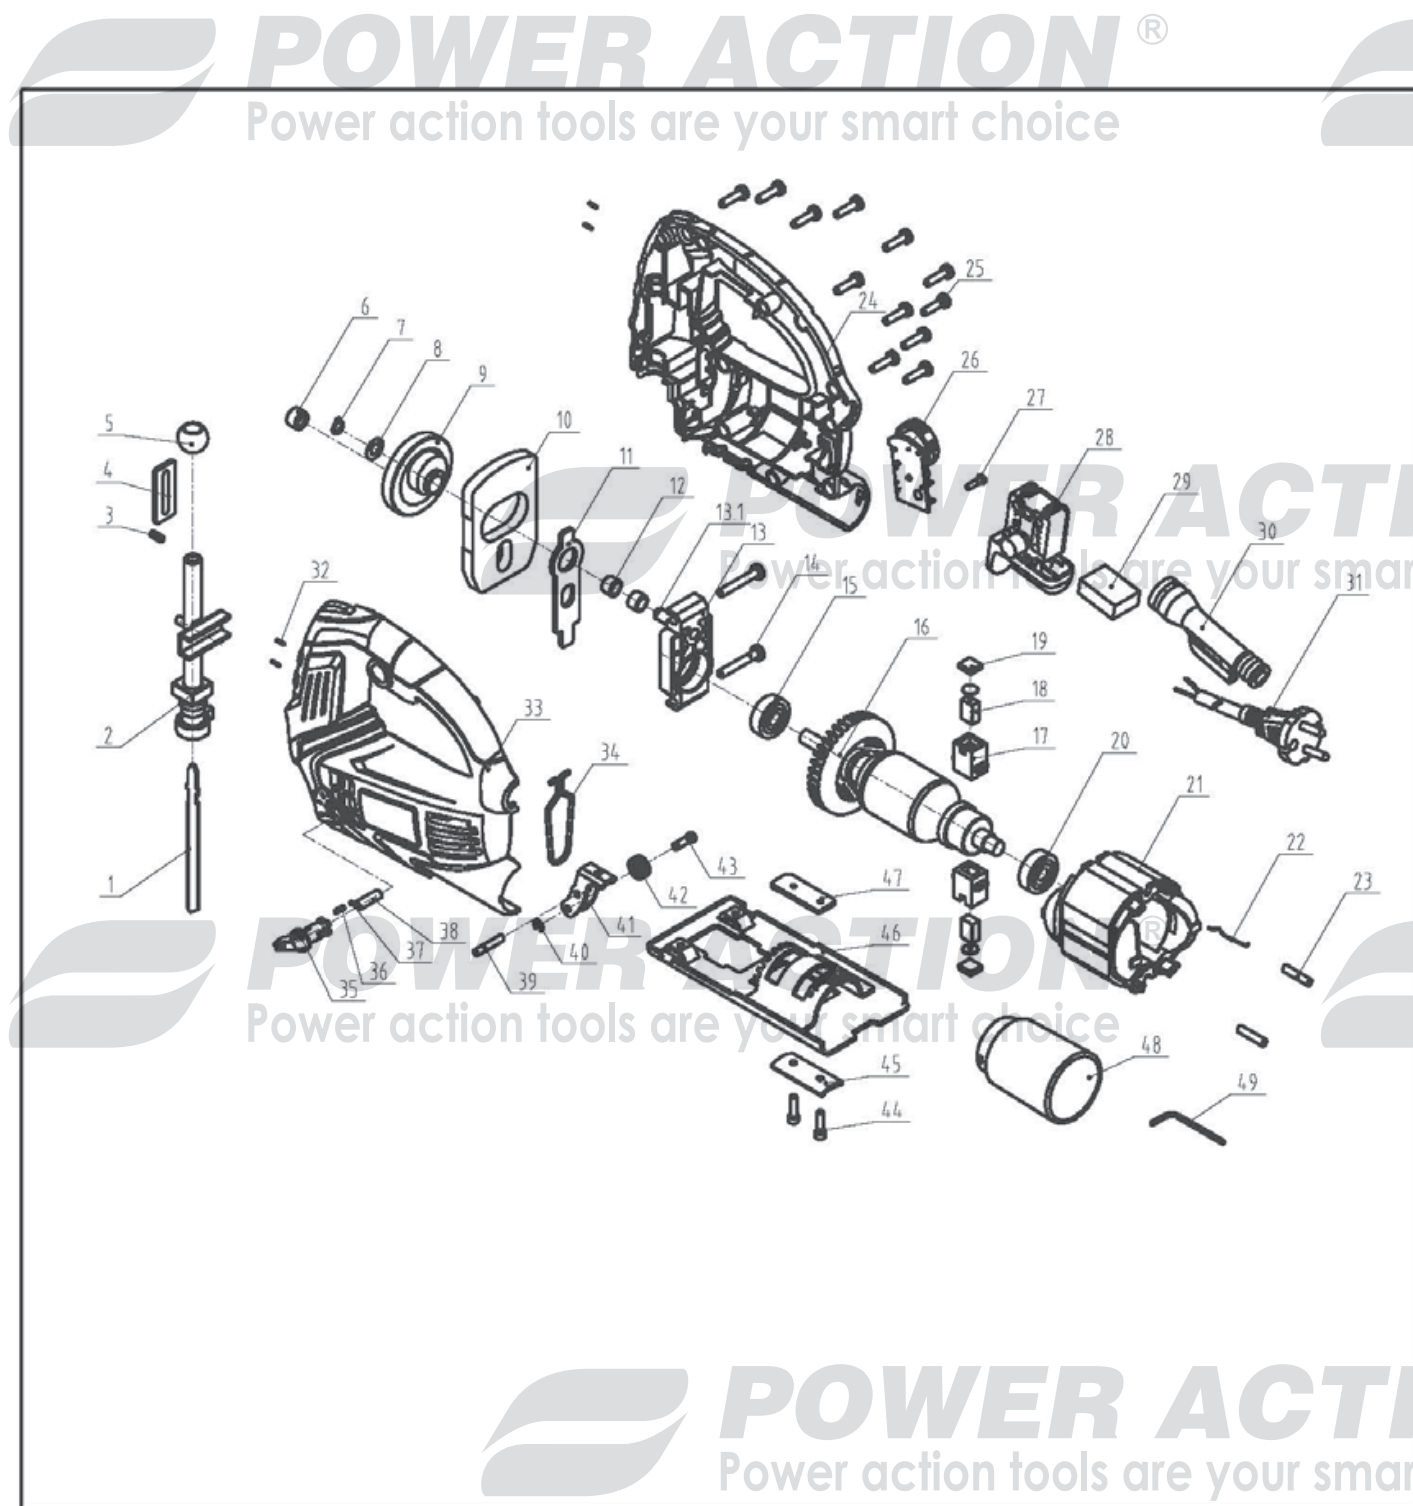

JS800[®]

No.	Part list	No.	Part list
1	Saw blade	26	Variable speed
2	Reciprocating rod	27	Screw
3	Spring	28	Switch
4	Reciprocating rod guide	29	Capacitor
5	Reciprocating rod holder	30	Cable sleeve
6	Bush	31	Cable
7	Circlip	32	Screw
8	Washer	33	Right housing
9	Gear	34	Protection steel wire
10	Balance block	35	Pendulum knob
11	Pendulum bar	36	Spring
12	Needle bearing	37	Steel ball
13	Central block	38	Pendulum shaft
14	screw	39	Blade holder pin
15	Bearing 627Z	40	Circlip
16	Rotor	41	Blade holder
17	Brush holder	42	Roller
18	Carbon brush	43	Roller pin
19	Brush holder cover	44	Screw
20	Bearing 608Z	45	Press board
21	Stator	46	Base
22	Steel wire	47	Connecting piece
23	Inductance	48	Dust tube
24	Right housing	49	Allen key
25	screw	50	