

AC2415

NO. DESCRIPTION 1 HEX BOLT WITH WASHER 2 ROTOR 3 CYLINDER HEAD 43 BEARING 6202 4 EXHAUST ELBOW 44 STATOR WITH THERMAL PROTECTOR 5 CYLINDER GASKET 45 REAR MOTOR COVER 6 VALVE PLATE 46 FAN 7 SCREW 47 HEX BOLT 8 LOCKWASHER 48 LOCK WASHER 9 FLAT WASHER 49 SPACER 10 VALVE LIMITER 50 EXT RETAINING RING 11 VALVE REED 51 FAN COVER 12 POSITION PIN 52 HEX BOLT 13 INLET VALVE 53 SCREW 14 PISTON 54 QUICK COUPLER 15 CYLINDER GASKET LOWER 16 CYLINDER GASKET LOWER 18 COMPRESSION RING 19 OIL RING 60 BALL VALVE COUPLER 20 PISTON PIN 64 SAFETY VALVE 21 EXT RETAINING RING 66 RELIEF TUBE ASSEMBLY 22 CONNECTING ROD 67 POWER CORD & PLUG 48 PLUG 49 SCREW 71 TANK 27 OIL INDICATOR SIGHT 75 FOOT 28 OIL INDICATOR SEAL 77 DRAIN VALVE 39 CRANKCASE 80 WHEEL 31 OIL SEAL 81 PIN 32 CRANKCASE 81 DISCHARGE SWITCH AND 36 OIL PLUG 38 CAPACITOR 41 BEARING 6204	Г	112			R. B.
3	4	NO.	DESCRIPTION	NO.	DESCRIPTION
4 EXHAUST ELBOW 4 STATOR WITH THERMAL PROTECTOR 5 CYLINDER GASKET 45 REAR MOTOR COVER 6 VALVE PLATE 46 FAN 7 SCREW 47 HEX BOLT 8 LOCKWASHER 48 LOCK WASHER 9 FLAT WASHER 49 SPACER 10 VALVE LIMITER 50 EXT RETAINING RING 11 VALVE REED 51 FAN COVER 12 POSITION PIN 52 HEX BOLT 13 INLET VALVE 53 SCREW 14 PISTON 54 QUICK COUPLER 15 CYLINDER GASKET UPPER 55 PRESSURE GAUGE 16 CYLINDER GASKET LOWER 17 CYLINDER GASKET LOWER 18 COMPRESSION RING 19 OIL RING 60 BALL VALVE COUPLER 20 PISTON PIN 64 SAFETY VALVE 21 EXT RETAINING RING 22 CONNECTING ROD 23 ECCENTRICITY 70 HANDLE GRIP 24 SCREW 71 TANK 25 BREATH PIPE 72 CHECK VALVE 26 SCREW 73 HEX NUT 27 OIL INDICATOR SEAL 77 DRAIN VALVE 28 CRANKCASE COVER 79 SCREW 30 COVER SEAL 80 WHEEL 31 OIL SEAL 81 PIN 32 CRANKCASE 82 DISCHARGE PIPE ASSEMBLY 9 RESSURE SWITCH AND AIR FLIEB 35 HEX BOLT 101 PRESSURE PIPE ASSEMBLY 9 CRANKCASE 85 AIR FILTER 36 OIL PLUG 38 CAPACITOR	rk		An table are valle en		Pholog
5 CYLINDER GASKET 45 REAR MOTOR COVER 6 VALVE PLATE 46 FAN 7 SCREW 47 HEX BOLT 8 LOCKWASHER 48 LOCK WASHER 9 FLAT WASHER 49 SPACER 10 VALVE LIMITER 50 EXT RETAINING RING 11 VALVE REED 51 FAN COVER 12 POSITION PIN 52 HEX BOLT 13 INLET VALVE 53 SCREW 14 PISTON 54 QUICK COUPLER 15 CYLINDER GASKET UPPER 55 PRESSURE GAUGE 16 CYLINDER 57 REGULATOR 17 CYLINDER GASKET LOWER 58 INNERNAL WIRE 18 COMPRESSION RING 59 PRESSURE SWITCH 19 OIL RING 60 BALL VALVE COUPLER 20 PISTON 64 SAFETY VALVE 21 EXT RETAINING RING 66 RELIEF TUBE ASSEMBLY 22 CONNECTING ROD 67 POWER CORD & PLUG 23 ECCENTRICITY 70 HANDLE GRIP 24 SCREW 71 TANK 25 BREATH PIPE 72 CHECK VALVE 26 SCREW 73 HEX NUT 27 OIL INDICATOR SIGHT 75 FOOT 28 OIL INDICATOR SEAL 77 DRAIN VALVE 29 CRANKCASE COVER 79 SCREW 30 COVER SEAL 80 WHEEL 31 OIL SEAL 81 PIN 32 CRANKCASE 82 DISCHARGE PIPE ASSEMBLY 36 OIL PLUG 37 CAPACITOR	" [
6 VALVE PLATE 7 SCREW 47 HEX BOLT 8 LOCKWASHER 9 FLAT WASHER 9 FLAT WASHER 10 VALVE LIMITER 50 EXT RETAINING RING 11 VALVE REED 51 FAN COVER 12 POSITION PIN 52 HEX BOLT 13 INLET VALVE 53 SCREW 14 PISTON 54 QUICK COUPLER 15 CYLINDER GASKET UPPER 55 PRESSURE GAUGE 16 CYLINDER GASKET LOWER 17 CYLINDER GASKET LOWER 18 COMPRESSION RING 59 PRESSURE SWITCH 19 OIL RING 60 BALL VALVE COUPLER 20 PISTON PIN 64 SAFETY VALVE 21 EXT RETAINING RING 66 RELIEF TUBE ASSEMBLY 22 CONNECTING ROD 67 POWER CORD & PLUG 23 ECCENTRICITY 70 HANDLE GRIP 24 SCREW 71 TANK 25 BREATH PIPE 72 CHECK VALVE 26 SCREW 73 HEX NUT 27 OIL INDICATOR SEAL 77 DRAIN VALVE 29 CRANKCASE COVER 79 SCREW 30 COVER SEAL 80 WHEEL 31 HEX BOLT 31 PIN PRESSURE SWITCH AND 36 OIL PLUG 38 CAPACITOR					
7 SCREW 47 HEX BOLT 8 LOCKWASHER 48 LOCK WASHER 9 FLAT WASHER 49 SPACER 10 VALVE LIMITER 50 EXT RETAINING RING 11 VALVE REED 51 FAN COVER 12 POSITION PIN 52 HEX BOLT 13 INLET VALVE 53 SCREW 14 PISTON 54 QUICK COUPLER 15 CYLINDER GASKET UPPER 55 PRESSURE GAUGE 16 CYLINDER GASKET LOWER 58 INNERNAL WIRE 17 CYLINDER GASKET LOWER 58 INNERNAL WIRE 18 COMPRESSION RING 59 PRESSURE SWITCH 19 OIL RING 60 BALL VALVE COUPLER 20 PISTON PIN 64 SAFETY VALVE 21 EXT RETAINING RING 66 RELIEF TUBE ASSEMBLY 22 CONNECTING ROD 67 POWER CORD & PLUG 23 ECCENTRICITY 70 HANDLE GRIP 24 SCREW 71 TANK 25 BREATH PIPE 72 CHECK VALVE 26 SCREW 73 HEX NUT 27 OIL INDICATOR SIGHT 75 FOOT 28 OIL INDICATOR SEAL 77 DRAIN VALVE 29 CRANKCASE AND WHEEL 31 OIL SEAL 81 PIN 32 CRANKCASE 82 DISCHARGE PIPE ASSEMBLY 33 HEX NUT 85 AIR FILTER 35 HEX BOLT 101 PRESSURE SWITCH AND AIR CONNECTOR ASSEMBLY 36 OIL PLUG 38 CAPACITOR					
8 LOCKWASHER 48 LOCK WASHER 9 FLAT WASHER 49 SPACER 10 VALVE LIMITER 50 EXT RETAINING RING 11 VALVE REED 51 FAN COVER 12 POSITION PIN 52 HEX BOLT 13 INLET VALVE 53 SCREW 14 PISTON 54 QUICK COUPLER 15 CYLINDER GASKET UPPER 55 PRESSURE GAUGE 16 CYLINDER GASKET LOWER 58 INNERNAL WIRE 17 CYLINDER GASKET LOWER 58 INNERNAL WIRE 18 COMPRESSION RING 59 PRESSURE SWITCH 19 OIL RING 60 BALL VALVE COUPLER 20 PISTON PIN 64 SAFETY VALVE 21 EXT RETAINING RING 66 RELIEF TUBE ASSEMBLY 22 CONNECTING ROD 67 POWER CORD & PLUG 23 ECCENTRICITY 70 HANDLE GRIP 24 SCREW 71 TANK 25 BREATH PIPE 72 CHECK VALVE 26 SCREW 73 HEX NUT 27 OIL INDICATOR SIGHT 75 FOOT 28 OIL INDICATOR SEAL 77 DRAIN VALVE 29 CRANKCASE COVER 79 SCREW 30 COVER SEAL 80 WHEEL 31 OIL SEAL 81 PIN 32 CRANKCASE 82 DISCHARGE PIPE ASSEMBLY 33 HEX NUT 85 AIR FILTER 35 HEX BOLT 101 PRESSURE SWITCH AND AIR CONNECTOR ASSEMBLY			VALVE PLATE		FAN
9 FLAT WASHER 49 SPACER 10 VALVE LIMITER 50 EXT RETAINING RING 11 VALVE REED 51 FAN COVER 12 POSITION PIN 52 HEX BOLT 13 INLET VALVE 53 SCREW 14 PISTON 54 QUICK COUPLER 15 CYLINDER GASKET UPPER 55 PRESSURE GAUGE 16 CYLINDER 57 REGULATOR 17 CYLINDER GASKET LOWER 58 INNERNAL WIRE 18 COMPRESSION RING 59 PRESSURE SWITCH 19 OIL RING 60 BALL VALVE COUPLER 20 PISTON PIN 64 SAFETY VALVE 21 EXT RETAINING RING 66 RELIEF TUBE ASSEMBLY 22 CONNECTING ROD 67 POWER CORD & PLUG 23 ECCENTRICITY 70 HANDLE GRIP 24 SCREW 71 TANK 25 BREATH PIPE 72 CHECK VALVE 26 SCREW 73 HEX NUT 27 OIL INDICATOR SIGHT 75 FOOT 28 OIL INDICATOR SEAL 77 DRAIN VALVE 29 CRANKCASE COVER 79 SCREW 30 COVER SEAL 80 WHEEL 31 OIL SEAL 81 PIN 32 CRANKCASE 82 DISCHARGE PIPE ASSEMBLY 33 HEX NUT 85 AIR FILTER 35 HEX BOLT 101 PRESSURE SWITCH AND 36 OIL PLUG AIR CONNECTOR ASSEMBLY 38 CAPACITOR			SCREW	47	HEX BOLT
10 VALVE LIMITER 50 EXT RETAINING RING 11 VALVE REED 51 FAN COVER 12 POSITION PIN 52 HEX BOLT 13 INLET VALVE 53 SCREW 14 PISTON 54 QUICK COUPLER 15 CYLINDER GASKET UPPER 55 PRESSURE GAUGE 16 CYLINDER 57 REGULATOR 17 CYLINDER GASKET LOWER 58 INNERNAL WIRE 18 COMPRESSION RING 59 PRESSURE SWITCH 19 OIL RING 60 BALL VALVE COUPLER 20 PISTON PIN 64 SAFETY VALVE 21 EXT RETAINING RING 66 RELIEF TUBE ASSEMBLY 22 CONNECTING ROD 67 POWER CORD & PLUG 23 ECCENTRICITY 70 HANDLE GRIP 24 SCREW 71 TANK 25 BREATH PIPE 72 CHECK VALVE 26 SCREW 73 HEX NUT 27 OIL INDICATOR SIGHT 75 FOOT 28 OIL INDICATOR SEAL 77 DRAIN VALVE 29 CRANKCASE COVER 79 SCREW 30 COVER SEAL 80 WHEEL 31 OIL SEAL 81 PIN 32 CRANKCASE 82 DISCHARGE PIPE ASSEMBLY 33 HEX NUT 85 AIR FILTER 35 HEX BOLT 101 PRESSURE SWITCH AND 36 OIL PLUG 38 CAPACITOR		8	LOCKWASHER	48	LOCK WASHER
11 VALVE REED 51 FAN COVER 12 POSITION PIN 52 HEX BOLT 13 INLET VALVE 53 SCREW 14 PISTON 54 QUICK COUPLER 15 CYLINDER GASKET UPPER 55 PRESSURE GAUGE 16 CYLINDER 57 REGULATOR 17 CYLINDER GASKET LOWER 58 INNERNAL WIRE 18 COMPRESSION RING 59 PRESSURE SWITCH 19 OIL RING 60 BALL VALVE COUPLER 20 PISTON PIN 64 SAFETY VALVE 21 EXT RETAINING RING 66 RELIEF TUBE ASSEMBLY 22 CONNECTING ROD 67 POWER CORD & PLUG 23 ECCENTRICITY 70 HANDLE GRIP 24 SCREW 71 TANK 25 BREATH PIPE 72 CHECK VALVE 26 SCREW 73 HEX NUT 27 OIL INDICATOR SIGHT 75 FOOT 28 OIL INDICATOR SEAL 77 DRAIN VALVE 29 CRANKCASE COVER 79 SCREW 30 COVER SEAL 80 WHEEL 31 OIL SEAL 81 PIN 32 CRANKCASE 82 DISCHARGE PIPE ASSEMBLY 33 HEX NUT 85 AIR FILTER 34 OIL PLUG 35 HEX BOLT 101 PRESSURE SWITCH AND AIR CONNECTOR ASSEMBLY		9	FLAT WASHER	49	SPACER
12 POSITION PIN 52 HEX BOLT 13 INLET VALVE 53 SCREW 14 PISTON 54 QUICK COUPLER 15 CYLINDER GASKET UPPER 55 PRESSURE GAUGE 16 CYLINDER 57 REGULATOR 17 CYLINDER GASKET LOWER 58 INNERNAL WIRE 18 COMPRESSION RING 59 PRESSURE SWITCH 19 OIL RING 60 BALL VALVE COUPLER 20 PISTON PIN 64 SAFETY VALVE 21 EXT RETAINING RING 66 RELIEF TUBE ASSEMBLY 22 CONNECTING ROD 67 POWER CORD & PLUG 23 ECCENTRICITY 70 HANDLE GRIP 24 SCREW 71 TANK 25 BREATH PIPE 72 CHECK VALVE 26 SCREW 73 HEX NUT 27 OIL INDICATOR SIGHT 75 FOOT 28 OIL INDICATOR SEAL 77 DRAIN VALVE 29 CRANKCASE COVER 79 SCREW 30 COVER SEAL 80 WHEEL 31 OIL SEAL 81 PIN 32 CRANKCASE 82 DISCHARGE PIPE ASSEMBLY 33 HEX NUT 85 AIR FILTER 35 HEX BOLT 101 PRESSURE SWITCH AND AIR CONNECTOR ASSEMBLY		10	VALVE LIMITER	50	EXT RETAINING RING
13 INLET VALVE 53 SCREW 14 PISTON 54 QUICK COUPLER 15 CYLINDER GASKET UPPER 55 PRESSURE GAUGE 16 CYLINDER 57 REGULATOR 17 CYLINDER GASKET LOWER 58 INNERNAL WIRE 18 COMPRESSION RING 59 PRESSURE SWITCH 19 OIL RING 60 BALL VALVE COUPLER 20 PISTON PIN 64 SAFETY VALVE 21 EXT RETAINING RING 66 RELIEF TUBE ASSEMBLY 22 CONNECTING ROD 67 POWER CORD & PLUG 23 ECCENTRICITY 70 HANDLE GRIP 24 SCREW 71 TANK 25 BREATH PIPE 72 CHECK VALVE 26 SCREW 73 HEX NUT 27 OIL INDICATOR SIGHT 75 FOOT 28 OIL INDICATOR SEAL 77 DRAIN VALVE 29 CRANKCASE COVER 79 SCREW 30 COVER SEAL 80 WHEEL 31 OIL SEAL 81 PIN 32 CRANKCASE 82 DISCHARGE PIPE ASSEMBLY 33 HEX NUT 85 AIR FILTER 35 HEX BOLT 101 PRESSURE SWITCH AND 36 OIL PLUG AIR CONNECTOR ASSEMBLY		11	VALVE REED	51	FAN COVER
14 PISTON 54 QUICK COUPLER 15 CYLINDER GASKET UPPER 55 PRESSURE GAUGE 16 CYLINDER 57 REGULATOR 17 CYLINDER GASKET LOWER 58 INNERNAL WIRE 18 COMPRESSION RING 59 PRESSURE SWITCH 19 OIL RING 60 BALL VALVE COUPLER 20 PISTON PIN 64 SAFETY VALVE 21 EXT RETAINING RING 66 RELIEF TUBE ASSEMBLY 22 CONNECTING ROD 67 POWER CORD & PLUG 23 ECCENTRICITY 70 HANDLE GRIP 24 SCREW 71 TANK 25 BREATH PIPE 72 CHECK VALVE 26 SCREW 73 HEX NUT 27 OIL INDICATOR SIGHT 75 FOOT 28 OIL INDICATOR SEAL 77 DRAIN VALVE 29 CRANKCASE COVER 79 SCREW 30 COVER SEAL 80 WHEEL 31 OIL SEAL 81 PIN 32 CRANKCASE 82 DISCHARGE PIPE ASSEMBLY 33 HEX NUT 85 AIR FILTER 35 HEX BOLT 101 PRESSURE SWITCH AND 36 OIL PLUG AIR CONNECTOR ASSEMBLY 38 CAPACITOR		12	POSITION PIN	52	HEX BOLT
14 PISTON 15 CYLINDER GASKET UPPER 16 CYLINDER 17 CYLINDER GASKET LOWER 18 COMPRESSION RING 19 OIL RING 20 PISTON PIN 21 EXT RETAINING RING 22 CONNECTING ROD 23 ECCENTRICITY 24 SCREW 25 BREATH PIPE 26 SCREW 27 OIL INDICATOR SIGHT 28 OIL INDICATOR SEAL 29 CRANKCASE 30 LOVER SEAL 31 OIL SEAL 31 OIL SEAL 32 CAPACITOR 32 CAPACITOR 35 PRESSURE SWITCH 36 PRESSURE SWITCH 36 INNERNAL WIRE 37 REGULATOR 38 INNERNAL WIRE 38 INNERNAL WIRE 48 INNERNAL WIRE 49 CRANKCASE 40 INNERNAL WIRE 41 INNERNAL WIRE 42 INNERNAL WIRE 43 INNERNAL WIRE 44 INNERNAL WIRE 45 INNERNAL WIRE 46 INNERNAL WIRE 46 INNERNAL WIRE 47 INNERNAL WIRE 48 INNERSURE 48 INN		13	INLET VALVE	53	SCREW
16 CYLINDER 57 REGULATOR 17 CYLINDER GASKET LOWER 58 INNERNAL WIRE 18 COMPRESSION RING 59 PRESSURE SWITCH 19 OIL RING 60 BALL VALVE COUPLER 20 PISTON PIN 64 SAFETY VALVE 21 EXT RETAINING RING 66 RELIEF TUBE ASSEMBLY 22 CONNECTING ROD 67 POWER CORD & PLUG 23 ECCENTRICITY 70 HANDLE GRIP 24 SCREW 71 TANK 25 BREATH PIPE 72 CHECK VALVE 26 SCREW 73 HEX NUT 27 OIL INDICATOR SIGHT 75 FOOT 28 OIL INDICATOR SEAL 77 DRAIN VALVE 29 CRANKCASE COVER 79 SCREW 30 COVER SEAL 80 WHEEL 31 OIL SEAL 81 PIN 32 CRANKCASE 82 DISCHARGE PIPE ASSEMBLY 33 HEX NUT 85 AIR FILTER 35 HEX BOLT 101 PRESSURE SWITCH AND 36 OIL PLUG AIR CONNECTOR ASSEMBLY		14	PISTON	54	
17 CYLINDER GASKET LOWER 18 COMPRESSION RING 59 PRESSURE SWITCH 19 OIL RING 60 BALL VALVE COUPLER 20 PISTON PIN 64 SAFETY VALVE 21 EXT RETAINING RING 66 RELIEF TUBE ASSEMBLY 22 CONNECTING ROD 67 POWER CORD & PLUG 23 ECCENTRICITY 70 HANDLE GRIP 24 SCREW 71 TANK 25 BREATH PIPE 72 CHECK VALVE 26 SCREW 73 HEX NUT 27 OIL INDICATOR SIGHT 75 FOOT 28 OIL INDICATOR SEAL 77 DRAIN VALVE 29 CRANKCASE COVER 30 COVER SEAL 80 WHEEL 31 OIL SEAL 81 PIN 32 CRANKCASE 82 DISCHARGE PIPE ASSEMBLY 33 HEX NUT 85 AIR FILTER 35 HEX BOLT 101 PRESSURE SWITCH AND AIR CONNECTOR ASSEMBLY		15	CYLINDER GASKET UPPER	55	PRESSURE GAUGE
18 COMPRESSION RING 19 OIL RING 60 BALL VALVE COUPLER 20 PISTON PIN 64 SAFETY VALVE 21 EXT RETAINING RING 66 RELIEF TUBE ASSEMBLY 22 CONNECTING ROD 67 POWER CORD & PLUG 23 ECCENTRICITY 70 HANDLE GRIP 24 SCREW 71 TANK 25 BREATH PIPE 72 CHECK VALVE 26 SCREW 73 HEX NUT 27 OIL INDICATOR SIGHT 75 FOOT 28 OIL INDICATOR SEAL 77 DRAIN VALVE 29 CRANKCASE COVER 30 COVER SEAL 80 WHEEL 31 OIL SEAL 81 PIN 32 CRANKCASE 82 DISCHARGE PIPE ASSEMBLY 33 HEX NUT 85 AIR FILTER 35 HEX BOLT 101 PRESSURE SWITCH AND AIR CONNECTOR ASSEMBLY 38 CAPACITOR		16	CYLINDER	57	REGULATOR
19 OIL RING 20 PISTON PIN 21 EXT RETAINING RING 22 CONNECTING ROD 23 ECCENTRICITY 24 SCREW 25 BREATH PIPE 26 SCREW 27 OIL INDICATOR SIGHT 28 OIL INDICATOR SEAL 29 CRANKCASE COVER 31 OIL SEAL 31 OIL SEAL 31 OIL SEAL 32 CRANKCASE 33 HEX NUT 34 SCREW 35 AIR FILTER 36 OIL PLUG 37 POWER CORD & PLUG 38 RELIEF TUBE ASSEMBLY 39 POWER CORD & PLUG 40 RELIEF TUBE ASSEMBLY 40 POWER CORD & PLUG 41 TANK 42 CHECK VALVE 42 CHECK VALVE 43 HEX NUT 45 FOOT 46 SCREW 47 DRAIN VALVE 48 WHEEL 49 CRANKCASE COVER 40 WHEEL 41 PIN 42 CRANKCASE 42 DISCHARGE PIPE ASSEMBLY 43 HEX NUT 45 AIR FILTER 46 OIL PLUG 46 AIR CONNECTOR ASSEMBLY 47 AIR CONNECTOR ASSEMBLY 48 CAPACITOR		17	CYLINDER GASKET LOWER	58	INNERNAL WIRE
20 PISTON PIN 64 SAFETY VALVE 21 EXT RETAINING RING 66 RELIEF TUBE ASSEMBLY 22 CONNECTING ROD 67 POWER CORD & PLUG 23 ECCENTRICITY 70 HANDLE GRIP 24 SCREW 71 TANK 25 BREATH PIPE 72 CHECK VALVE 26 SCREW 73 HEX NUT 27 OIL INDICATOR SIGHT 75 FOOT 28 OIL INDICATOR SEAL 77 DRAIN VALVE 29 CRANKCASE COVER 79 SCREW 30 COVER SEAL 80 WHEEL 31 OIL SEAL 81 PIN 32 CRANKCASE 82 DISCHARGE PIPE ASSEMBLY 33 HEX NUT 85 AIR FILTER 35 HEX BOLT 101 PRESSURE SWITCH AND 36 OIL PLUG AIR CONNECTOR ASSEMBLY 38 CAPACITOR		18	COMPRESSION RING	59	PRESSURE SWITCH
21 EXT RETAINING RING 22 CONNECTING ROD 23 ECCENTRICITY 24 SCREW 25 BREATH PIPE 26 SCREW 27 OIL INDICATOR SIGHT 28 OIL INDICATOR SEAL 29 CRANKCASE COVER 30 COVER SEAL 31 OIL SEAL 31 OIL SEAL 32 CRANKCASE 33 HEX NUT 35 HEX NUT 36 OIL PLUG 38 CAPACITOR 38 CAPACITOR		19	OIL RING	60	BALL VALVE COUPLER
22 CONNECTING ROD 67 POWER CORD & PLUG 23 ECCENTRICITY 70 HANDLE GRIP 24 SCREW 71 TANK 25 BREATH PIPE 72 CHECK VALVE 26 SCREW 73 HEX NUT 27 OIL INDICATOR SIGHT 75 FOOT 28 OIL INDICATOR SEAL 77 DRAIN VALVE 29 CRANKCASE COVER 79 SCREW 30 COVER SEAL 80 WHEEL 31 OIL SEAL 81 PIN 32 CRANKCASE 82 DISCHARGE PIPE ASSEMBLY 33 HEX NUT 85 AIR FILTER 35 HEX BOLT 101 PRESSURE SWITCH AND 36 OIL PLUG AIR CONNECTOR ASSEMBLY 38 CAPACITOR		20	PISTON PIN	64	SAFETY VALVE
23 ECCENTRICITY 24 SCREW 71 TANK 25 BREATH PIPE 72 CHECK VALVE 26 SCREW 73 HEX NUT 27 OIL INDICATOR SIGHT 75 FOOT 28 OIL INDICATOR SEAL 77 DRAIN VALVE 29 CRANKCASE COVER 30 COVER SEAL 31 OIL SEAL 31 OIL SEAL 31 OIL SEAL 32 CRANKCASE 82 DISCHARGE PIPE ASSEMBLY 33 HEX NUT 85 AIR FILTER 35 HEX BOLT 36 OIL PLUG 38 CAPACITOR		21	EXT RETAINING RING	66	RELIEF TUBE ASSEMBLY
24 SCREW 25 BREATH PIPE 26 SCREW 27 OIL INDICATOR SIGHT 27 OIL INDICATOR SEAL 29 CRANKCASE COVER 30 COVER SEAL 31 OIL SEAL 31 OIL SEAL 32 CRANKCASE 33 HEX NUT 34 DISCHARGE PIPE ASSEMBLY 35 HEX BOLT 36 OIL PLUG 38 CAPACITOR 39 CONSERVER 40 TANK 41 TANK 41 TANK 42 CHECK VALVE 43 HEX NUT 45 FOOT 46 POT 47 DRAIN VALVE 47 DRAIN VALVE 48 OF SCREW 49 OF SCREW 40 WHEEL 41 PIN 42 DISCHARGE PIPE ASSEMBLY 43 AIR FILTER 45 AIR FILTER 46 OIL PLUG 46 AIR CONNECTOR ASSEMBLY 47 DRAIN VALVE 48 OTL PLUG 48 OTL		22	CONNECTING ROD	67	POWER CORD & PLUG
25 BREATH PIPE 72 CHECK VALVE 26 SCREW 73 HEX NUT 27 OIL INDICATOR SIGHT 75 FOOT 28 OIL INDICATOR SEAL 77 DRAIN VALVE 29 CRANKCASE COVER 79 SCREW 30 COVER SEAL 80 WHEEL 31 OIL SEAL 81 PIN 32 CRANKCASE 82 DISCHARGE PIPE ASSEMBLY 33 HEX NUT 85 AIR FILTER 35 HEX BOLT 101 PRESSURE SWITCH AND 36 OIL PLUG AIR CONNECTOR ASSEMBLY 38 CAPACITOR		23	ECCENTRICITY	70	HANDLE GRIP
26 SCREW 27 OIL INDICATOR SIGHT 28 OIL INDICATOR SEAL 29 CRANKCASE COVER 30 COVER SEAL 31 OIL SEAL 31 OIL SEAL 32 CRANKCASE 33 HEX NUT 34 HEX NUT 35 HEX BOLT 36 OIL PLUG 38 CAPACITOR 38 CAPACITOR 39 FOOT 70 DRAIN VALVE 79 SCREW		24	SCREW		TANK
27 OIL INDICATOR SIGHT 28 OIL INDICATOR SEAL 29 CRANKCASE COVER 30 COVER SEAL 31 OIL SEAL 31 OIL SEAL 32 CRANKCASE 33 HEX NUT 34 HEX BOLT 35 HEX BOLT 36 OIL PLUG 38 CAPACITOR 37 DRAIN VALVE 39 DRAIN VALVE 30 WHEEL 31 PIN 32 CRANKCASE 32 DISCHARGE PIPE ASSEMBLY 33 HEX NUT 34 AIR FILTER 35 HEX BOLT 36 OIL PLUG 37 AIR CONNECTOR ASSEMBLY 38 CAPACITOR		25	BREATH PIPE	72	CHECK VALVE
28 OIL INDICATOR SEAL 77 DRAIN VALVE 29 CRANKCASE COVER 79 SCREW 30 COVER SEAL 80 WHEEL 31 OIL SEAL 81 PIN 32 CRANKCASE 82 DISCHARGE PIPE ASSEMBLY 33 HEX NUT 85 AIR FILTER 35 HEX BOLT 101 PRESSURE SWITCH AND 36 OIL PLUG AIR CONNECTOR ASSEMBLY 38 CAPACITOR		26	SCREW	73	HEX NUT
29 CRANKCASE COVER 79 SCREW 30 COVER SEAL 80 WHEEL 31 OIL SEAL 81 PIN 32 CRANKCASE 82 DISCHARGE PIPE ASSEMBLY 33 HEX NUT 85 AIR FILTER 35 HEX BOLT 101 PRESSURE SWITCH AND 36 OIL PLUG AIR CONNECTOR ASSEMBLY 38 CAPACITOR		27	OIL INDICATOR SIGHT	75	FOOT
30 COVER SEAL 80 WHEEL 31 OIL SEAL 81 PIN 32 CRANKCASE 82 DISCHARGE PIPE ASSEMBLY 33 HEX NUT 85 AIR FILTER 35 HEX BOLT 101 PRESSURE SWITCH AND 36 OIL PLUG AIR CONNECTOR ASSEMBLY 38 CAPACITOR		28	OIL INDICATOR SEAL	77	DRAIN VALVE
31 OIL SEAL 81 PIN 32 CRANKCASE 82 DISCHARGE PIPE ASSEMBLY 33 HEX NUT 85 AIR FILTER 35 HEX BOLT 101 PRESSURE SWITCH AND 36 OIL PLUG AIR CONNECTOR ASSEMBLY 38 CAPACITOR		29	CRANKCASE COVER	79	SCREW
32 CRANKCASE 82 DISCHARGE PIPE ASSEMBLY 33 HEX NUT 85 AIR FILTER 35 HEX BOLT 101 PRESSURE SWITCH AND 36 OIL PLUG AIR CONNECTOR ASSEMBLY 38 CAPACITOR		30	COVER SEAL	80	WHEEL
33 HEX NUT 85 AIR FILTER 35 HEX BOLT 101 PRESSURE SWITCH AND 36 OIL PLUG AIR CONNECTOR ASSEMBLY 38 CAPACITOR		31	OIL SEAL	81	PIN
35 HEX BOLT 101 PRESSURE SWITCH AND AIR CONNECTOR ASSEMBLY 38 CAPACITOR		32	CRANKCASE	82	DISCHARGE PIPE ASSEMBLY
36 OIL PLUG AIR CONNECTOR ASSEMBLY 38 CAPACITOR		33	HEX NUT	85	AIR FILTER
38 CAPACITOR		35	HEX BOLT	101	PRESSURE SWITCH AND
		36	OIL PLUG POWER O	ction	AIR CONNECTOR ASSEMBLY
41 BEARING 6204		38	CAPACITOR	CIIOI	1 10013 are your siman ene
		41	BEARING 6204		