


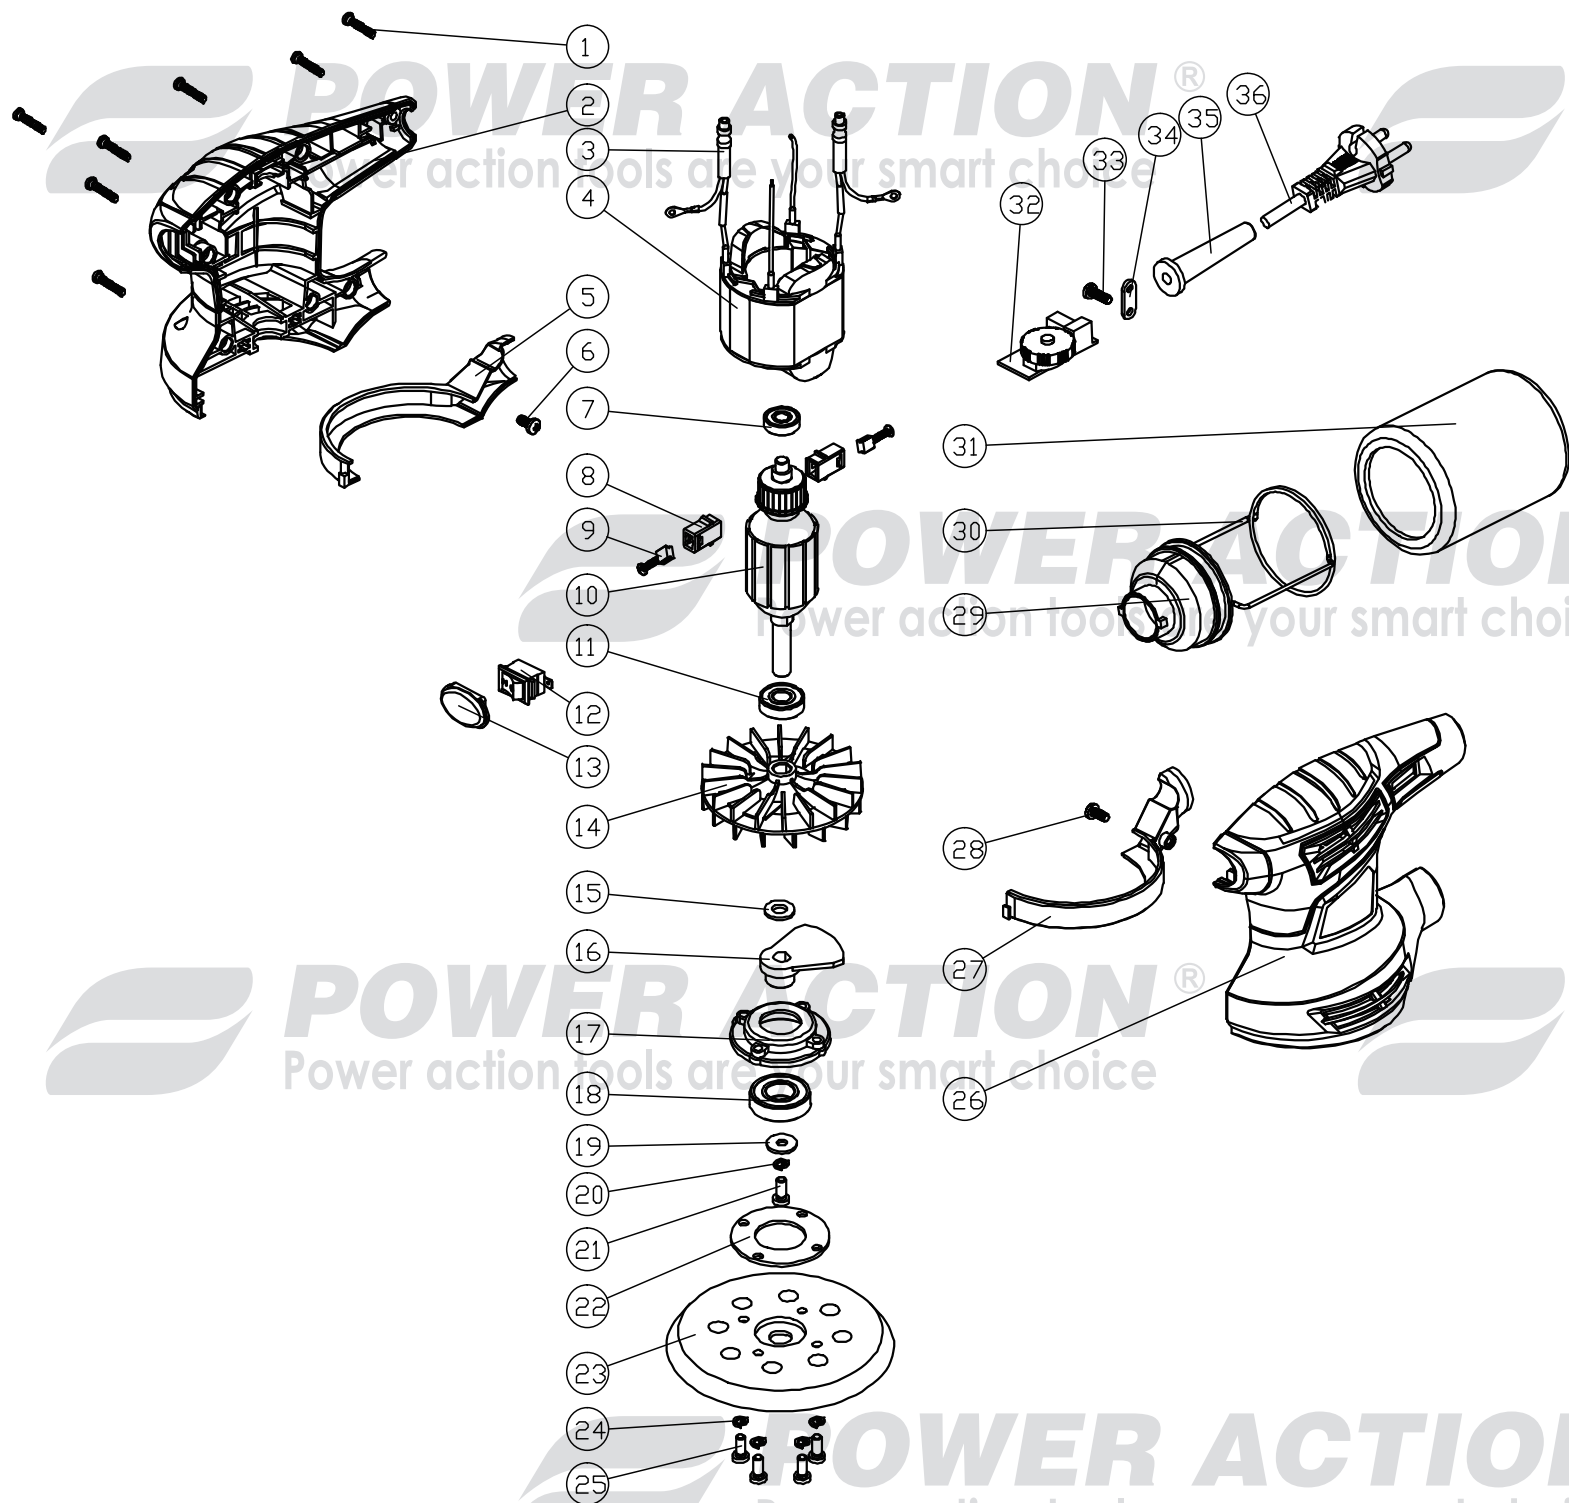

RS350[®]

No.	Part list	No.	Part list
1	Screw	20	Spring washer
2	Right housing	21	screw
3	Inductance	22	Press board
4	Stator	23	Base
5	Right wind guide	24	Spring washer
6	Screw	25	Screw
7	Bearing 607	26	Left housing
8	Carbon brush holder	27	Left wind guide
9	Carbon brush	28	screw
10	Rotor	29	Dust outlet
11	Bearing 609	30	Dust bag steel
12	Switch	31	Steel bag
13	Switch cover	32	Variable speed switch
14	Fan	33	Screw
15	Washer	34	Cable clamp
16	Balance block	35	Cable sleeve
17	Bearing seat	36	Cable & plug
18	Bearing 6002		
19	Washer		