


PS350

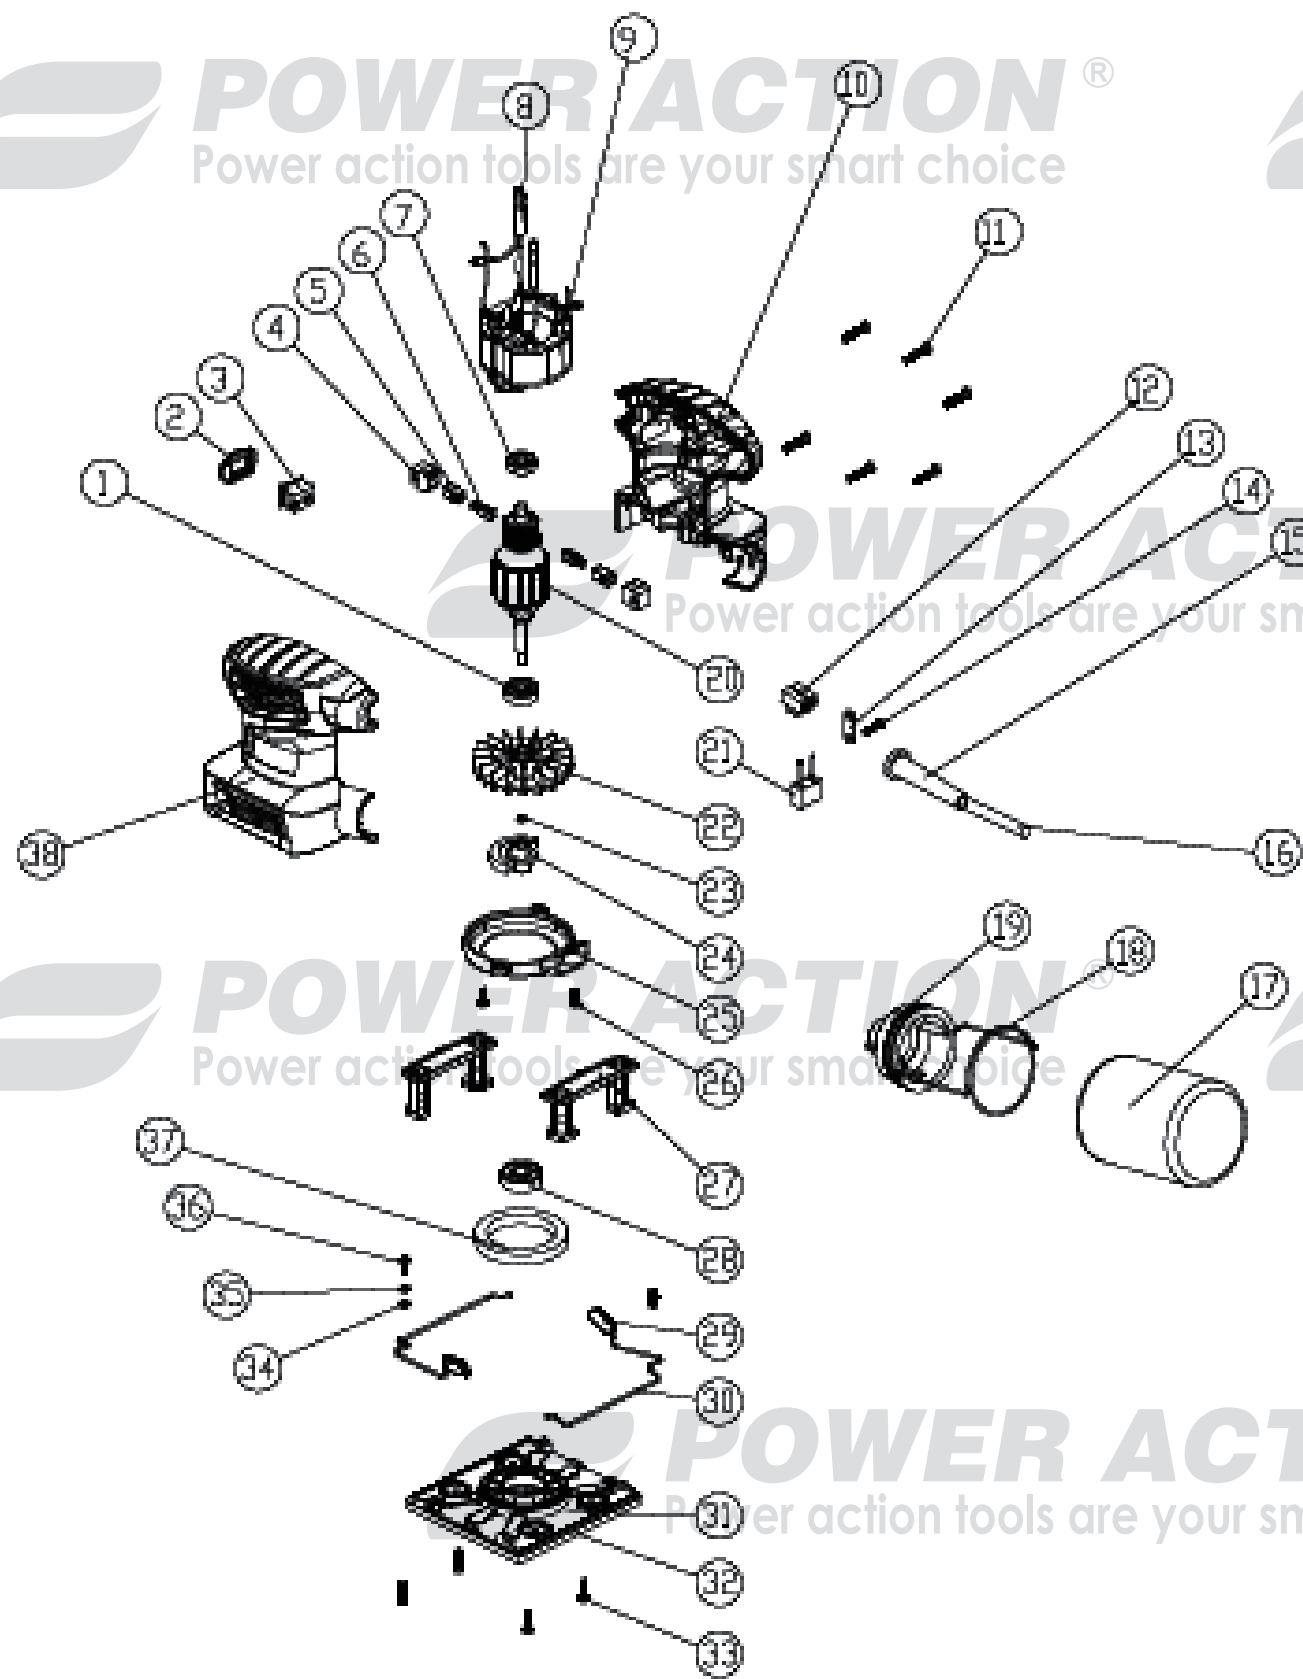

No.	Part list	No.	Part list
1	Bearing 627RS	20	Rotor
2	Switch cover	21	Capacitor
3	Switch	22	Fan
4	Carbon brush holder	23	Washer
5	Copper brush nest	24	Balance block
6	Carbon r brush	25	Dust cover
7	Bearing 607RS	26	Screw
8	Inductance	27	Base bracket
9	Stator	28	Bearing 629Z
10	Right housing	29	Clamp steel wire cap
11	Screw	30	Clamp Steel wire
12	Terminal block	31	Aluminum base
13	Cable clamp	32	Sponge base
14	Screw	33	Screw
15	Cable sleeve	34	Washer
16	Cable & plug	35	Spring washer
17	Dust bag	36	screw
18	Dust bag steel wire	37	Wool ring
19	Dust bag bracket	38	Left housing

